



1 Unpack the contents of the box. Remove any packing tape.

Accessory

User Guide Quick setup guide Output bin

Power cables Upper fold-chute Lower fold-chute

2 Prepare the printer.

a. Turn off the printer.
 b. If there is a dust cover at the back of the printer, remove the dust cover.
 c. If there are two duplexer tabs on the printer, remove the duplexer access covers.
 d. If there is a duplexer installed, remove the duplexer.

3 Remove the accessory from the reversible base.

4 Determine whether your printer is a single-tray or a two-tray printer.

a. For a single-tray printer, flip the base so that the 1 x 500 graphic is face up. Place the base near the rear of printer and place the accessory on the base.
 b. For a two-tray printer, flip the base so that the 2 x 250 graphic is face up. Remove the cutout cover and insert it into the cutout. Then, place the base near the rear of the printer and place the accessory on the base.

4a

4b Two Trays 2 x 250 sheet Tray Model

5 Plug the accessory interface cable (C-Link) into the connector on the printer labeled "ACCESSORY."

6 Plug power cable into accessory. Route the cables out the left side of the accessory as shown below.

7 Verify that the accessory and the printer are the same height. If so, use firm pressure to slide the accessory toward the rear of the printer.

8 Install the upper and lower fold-chutes. The lower chute installs at a very steep angle.

9 Install the output bin.

10 To engage the accessory, flip down the rear output door of the printer.

11 Plug the power cable into a power source.

12 Turn on the accessory and then turn on the printer.