

Downloading the HP LaserJet Printer Driver: PCL6

Note: Only the PCL6 Driver has complete functionality to enable printed image rotation.

1. Open your web browser to www.hp.com
2. Click "Support & Downloads" link
3. Click "HP driver downloads, software updates, and patches" link
4. Enter your "model product number" (we'll use "4100" for this example)
5. Select your printer model from list of results, and click on "drivers and downloads"
6. Select your Operating System (i.e. Microsoft Windows XP) from the "Quick Jump to Downloads for..." list
7. Choose the "hp laserjet 4100 PCL6 driver" –click on "download" link
8. From the "File Download" pop-up windows, select "Save This Program To Disk"
9. This brings up the "Save As" window- save the file to your Desktop
10. When download is complete, close browser (and File Download) window. Locate the saved file on your desktop(lj828en.zip) and double click it
11. File will begin "Winzip Self-Extractor". Write down the location indicated in the "Unzip to Folder:" window, and click "Unzip". When complete, close Winzip window
12. Next, Click on "Start", and select "Settings"- "Printers" (Windows XP users: open your "Printers" folders)
13. Choose "Add Printer", click "Next", and click either "Local" (if printer attached directly to your computer) or "Network"

Note: Windows2000 users only: If choosing "Local" printer, Select "LPT1:" in the next screen

14. Select "HP" from list of manufacturers, and click the "Have Disk" button
15. Click "Browse", and locate the directory where the Winzip Self-Extractor unzipped the printer driver download
16. Choose "hp4100p6", and click "Open". Click "Okay" to copy the manufacturer's files
17. Make sure your printer model appears in the "Printers" window, and click "Next"
18. Select "Yes" or "No" for using this printer as the Windows Default (your preference) and click "Next"
19. Click "Next" through the "Share This Printer" option without sharing, or ask your Network Administrator for Share details
20. Select "Yes" to print a test page, and click "Next"
21. Click "Finish" to complete the installation operation
22. Once the driver is loaded, return to the Printers folder, and double-click the printer you just installed
23. Click on "Printer" and "Properties" from the drop-down list
24. Click on the "Basics" tab (this will only be available with the PCL6 driver)
25. Under "Orientation", select "Portrait", and check the "Rotated" box
26. Click "OK"

Your printer is now configured to output properly to the Ameraseal-HP Attachment